



MAJESTO™ USER MANUAL




www.dolce-gusto.com

SAFETY PRECAUTIONS	4
MACHINE OVERVIEW	8
TOUCHSCREEN CONTROL	10
FIRST USE	12
CONNECT WITH WIFI	14
PREPARE YOUR BEVERAGE	16
SETTINGS	18
RINSING & DESCALING	24
TROUBLESHOOTING	26

SAFETY PRECAUTIONS




RECOMMENDATIONS FOR SAFE USE

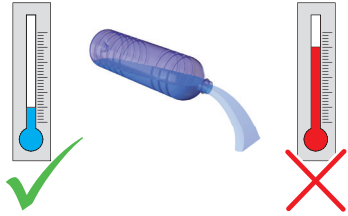


⚠ Never add hot water to the water tank!


⚠ For rinsing and beverage preparation only use fresh drinking water.

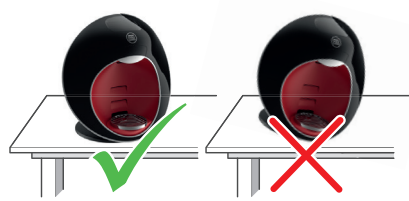

⚠ Always keep the machine upright!

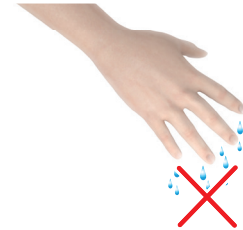

⚠ Do not touch plug with wet hands.
Do not touch machine with wet hands!

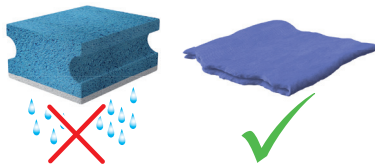

⚠ Never use a wet sponge. Only use a soft damp cloth to clean the top of the machine.



⚠ Do not touch used capsule after beverage preparation! Hot surface, risk of burns!



⚠ Do not use the rinsing tool for tea or hot water preparation.



⚠ IF LEFT UNUSED FOR MORE THAN 2 DAYS:
Fill water tank with fresh drinking water and insert it into machine.
Rinse machine (▶ see page 25).

MACHINE OVERVIEW



OVERVIEW OF THE PARTS



TECHNICAL DATA

USA
110 V, 60 Hz, 1460 W

P max. 15 bar

1.8 L

~4.8 kg

5–45 °C
41–113 °F

A = 35.8 cm
B = 36.0 cm
C = 33.6 cm

ECONOMY MODE

Please be aware that when the appliance is in Eco mode (after 30 minutes of non-use) it will still be drawing electricity (0.5 W/hour).

TOUCHSCREEN CONTROL




MAIN SCREEN

Beverage preparation
with pre-defined recipes
▶ see page 17



Beverage preparation
with custom settings
▶ see page 17

Automatic service reminder

 Yellow messages should be solved by the user as soon as possible, but do not stop the machine.

 Red messages stop the machine producing beverages.

▶ see page 27

Other symbols

 Home
go back to main screen

 Return
go to next higher menu level

 Settings
▶ see page 19

NAVIGATION THROUGH DRAGGING & TAPPING



Drag on the display to display additional content.



Tap on the display to choose or confirm.

FIRST USE







- 1 Ensure to use the correct mains voltage as given in "TECHNICAL DATA" on page 9. Connect power plug to mains power socket.



- 2 Switch on machine.

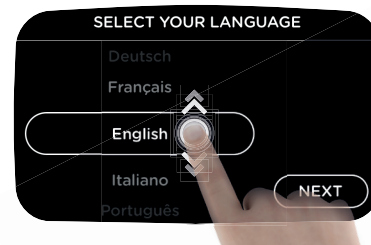


- 3 Tap on screen to select desired language and confirm with **NEXT**.

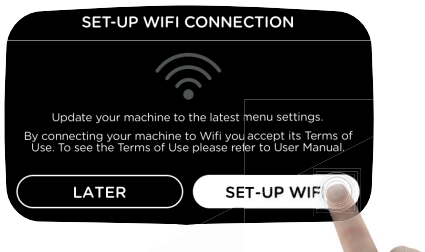


- 4 Set up WiFi connection (► see page 14). Choose **LATER** if you want to set it up later.




- 5 Select your country and confirm with **NEXT**.

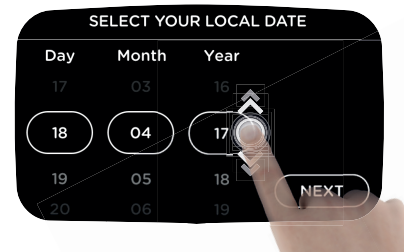

- 6 Select your local date and confirm with **NEXT**.

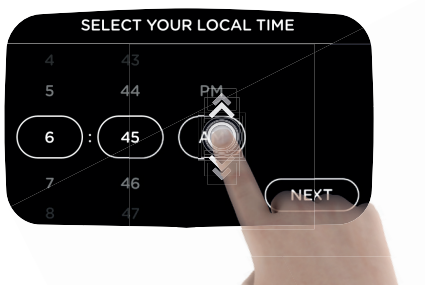

- 7 Select your local time and confirm with **NEXT**.

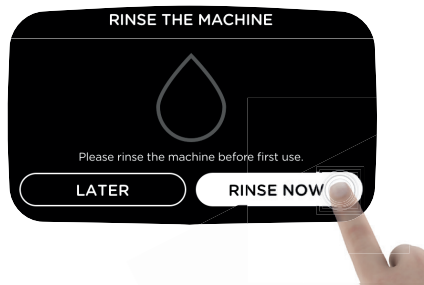

- 8 Rinse the machine before the first beverage preparation (recommendation). Follow instructions on screen. Choose **LATER** if you want to rinse later.



- 9 Confirm settings and move to **HOME** screen.

CONNECT WITH WIFI

MAJESTO™ is the first WiFi-ready NESCAFÉ® Dolce Gusto® machine that will keep your beverage menu and software up to date. Connect your machine to your WiFi network to benefit from various updates provided directly by NESCAFÉ® Dolce Gusto®:

- Discover new beverages that will be added to your beverage selection!
- Enjoy updated beverage screens for your main screen and your beverage preparation!
- Explore optimised software thanks to the latest software updates!




GOOD TO KNOW


- i** By connecting your machine to a WiFi network you accept the terms of use. You find the terms of use on page 31.
- i** For connecting your machine to your WiFi network you need:

 - 1. Name of your WiFi network
 - 2. Your WiFi password
- i** For detailed information on how to set up WiFi, please see page 31.


SET UP WIFI CONNECTION

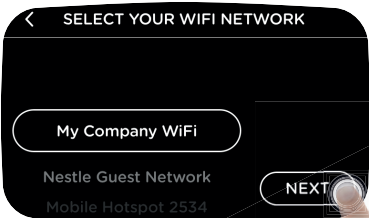

- 1** During first set-up of machine choose WiFi network and confirm with **NEXT**.

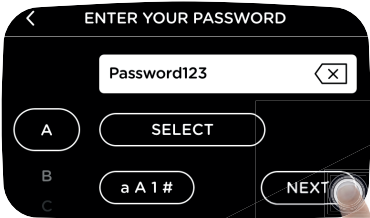

- 2** Enter password of selected WiFi network. Tap on **aA1#** to change characters on left side. Tap on **SELECT** to add character to password. Tap on **NEXT** to confirm password.

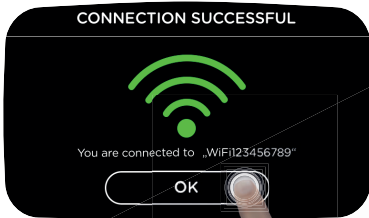


- 3** Once your machine is connected to your WiFi network, this message will appear. Confirm with **OK**.

ENTER WIFI SET-UP FROM MAIN SETTINGS SCREEN



- 1** If WiFi set-up has not been done during first set-up of machine, tap on **WiFi** menu.

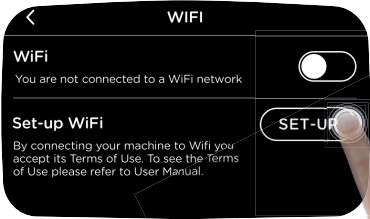

- 2** Tap on **SET-UP** to initiate WiFi connection process. Follow instructions on screen.

PREPARE YOUR BEVERAGE



CHOOSE BETWEEN PRE-DEFINED BEVERAGES...




- 1 Adjust drip tray to your needs. Place empty cup on cup support. Pull out capsule holder. Insert capsule in capsule holder and put it back into machine.




- 2 Choose your beverage from the selection menu. Tap on selected beverage to start beverage preparation.




- 3 A message reminds you to insert a capsule if the capsule holder has not been retracted/inserted. Tap **START** to start beverage preparation.

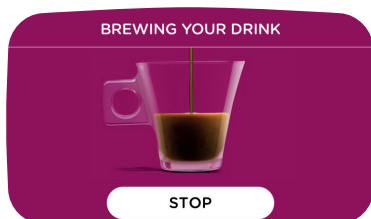

- 4 The screen shows the preparation status whilst the beverage is being prepared. Preparation can be stopped manually by tapping on **STOP**.

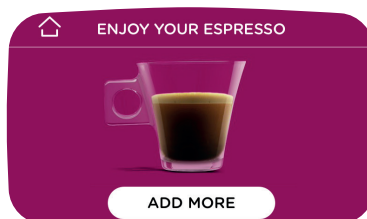

- 5 After finishing preparation tap **ADD MORE** to manually start preparation again. Tap **STOP** to stop manually.

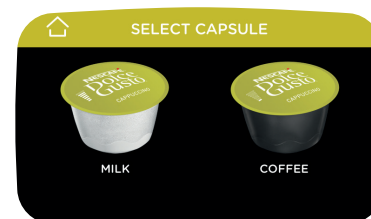

- i For all beverages with two capsules: select capsule and follow instructions on screen to start and stop each capsule.

...OR CUSTOMISE YOUR CUP



- 1 Tap on **CREATE A CUSTOM CUP** button.



- 2 Use volume selector to set volume display in accordance with the number of bars shown on capsule, or select amount of bars to your own taste. Choose XL beverage for an extra-large cup. Wait around 1.5 minutes if you want to prepare a second extra-large cup.



- 3 Tap hot water icon (or cold water icon – depending on beverage). Beverage preparation starts and ends automatically. Tap on hot water icon (or cold water icon) to stop preparation manually.

SETTINGS



Machine update 1



Machine care



Beverages selection



Statistics



WiFi



ACCESS SETTINGS MENU




Tap on icon to access **SETTINGS** menu.

MACHINE UPDATE



- 1 If machine update is available, a red circle will appear in settings menu. Tap on **Machine update** menu.

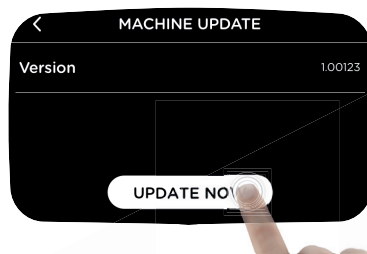


- 2 Tap on **UPDATE NOW** to start the update process of the machine software.


i Your machine needs to be connected to your WiFi network to receive updates (▶ see page 14).

19

MACHINE CARE

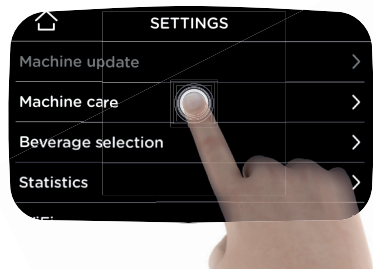

- 1 Tap on **Machine care** menu.

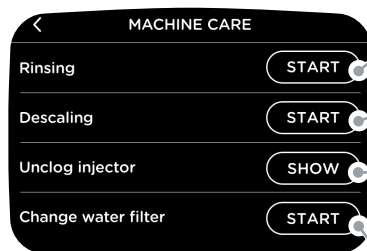

- 2 Tap on desired topics.

Start rinsing process
(▶ see page 25)


Start descaling process
(▶ see page 25)

View video instruction for unclogging machine. See detailed procedure in chapter TROUBLESHOOTING
(▶ see page 29)


Start water filter change process
(▶ see page 22)

SELECT BEVERAGES TO BE SHOWN IN MAIN SCREEN

i Adjust your main beverage menu to your needs! Reduce or increase the number of beverages, or add new beverages to your main menu.

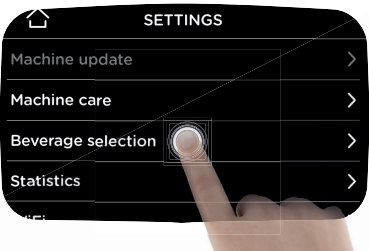


1 Tap on **Beverages selection** menu.

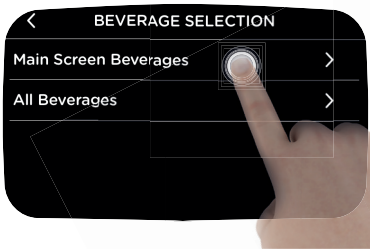

2 Tap on **Main Screen Beverages** to define the order of the beverages shown in the main screen.



3 Tap on arrow symbols below the beverages to change their order in the main screen.

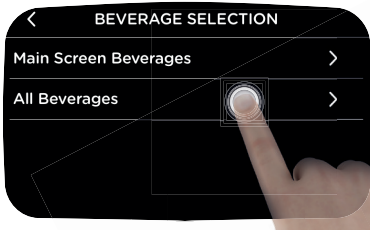


4 Tap on **All Beverages** to define the beverages which will be shown in the main screen.



5 Select beverages which will be shown in the main screen.

WATER FILTER SET-UP

i The MAJESTO™ machine is designed for use with the MAVEA AquaAroma Crema water filter. The MAVEA AquaAroma Crema water filter is available separately.

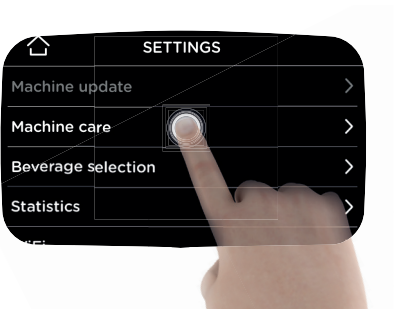

1 Tap on **Machine care** menu.




2 Tap on **START** at **Change water filter** menu.




3 To set up or change the water filter, tap on **START NOW** and follow instructions on screen.

OPTIONAL WATER TANK

i The MAJESTO™ machine is designed for use with mains water (mains supply connection) or with pumped water (external water tank connection). A mains water tank and a pumped water tank are available separately.

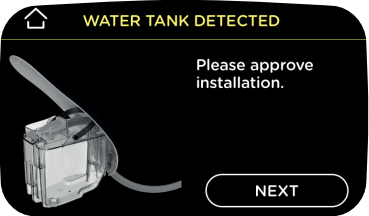

STATISTICS

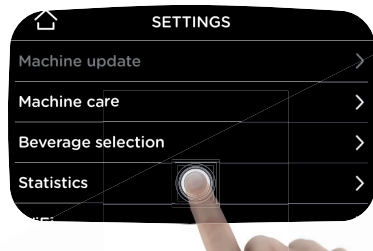


1 Tap on Statistics menu.



2 View the statistics for the machine.

MACHINE RESET

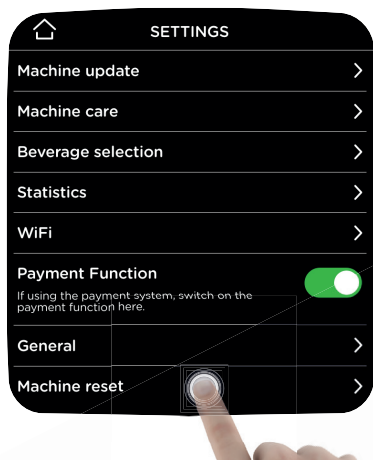

1 Tap on Machine reset menu.



2 Tap on OK to reset the MAJESTO™ back to its default settings. **All customized settings will be lost!**

RINSING & DESCALING



GOOD TO KNOW



Open bottom plate of capsule bin to get access to the Rinsing tool.




Capsule bin is designed for use as a container for rinsing and descaling (remove top cover and red capsule net beforehand).


RINSING



1 Tap on **SETTINGS** icon on main screen.

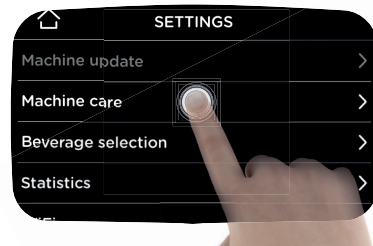

2 Tap on **Machine care** menu.

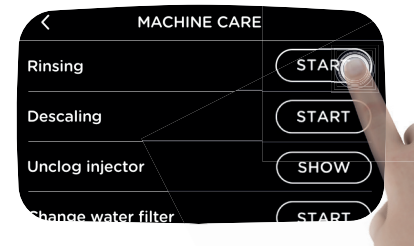

3 Tap on **Rinsing** to start the rinsing procedure. Follow instructions on screen. Machine will rinse for approximately 3 minutes.

DESCALING — AT LEAST EVERY 3 - 4 MONTHS




Make sure you descale your machine every 3–4 months to keep it in tip-top condition. Use NESCAFÉ® Dolce Gusto® liquid descaler. To order, call the hotline or go to the NESCAFÉ® Dolce Gusto® website.

Never use vinegar for descaling. If the machine is equipped with a water filter, always remove the filter before descaling.



MAJESTO™ tells you when you should descale your machine. Tap on **START NOW** button to start the descaling procedure. Follow instructions on screen. Machine will descale for approximately 4 minutes.

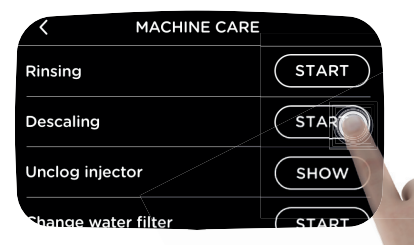

Alternatively you can also start the descaling process from the **SETTINGS** menu:
SETTINGS > Machine Care > Descal

TROUBLESHOOTING





AUTOMATIC SERVICE REMINDER


The machine will automatically detect potential defects and help you resolve them. Automatic service reminder (yellow or red triangle) will appear directly on the main screen:



Automatic service reminder

-  Yellow messages should be solved by the user as soon as possible, but do not stop the machine.
-  Red messages stop the machine producing beverages.

By tapping on the reminder (yellow or red triangle) the list of messages will be displayed:

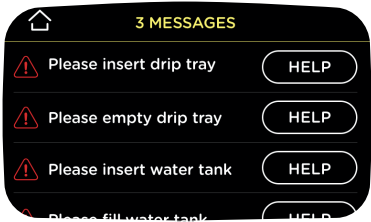


Tapping on **HELP** will display an instruction for resolving the defect.

 To resolve some particular defects, more extensive explanations are required.

BLOCKED FLUID PATH — NO LIQUID COMES OUT?

Remove blocked capsule and rinse machine

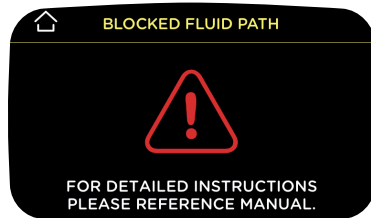

- 1 Error message **BLOCKED FLUID PATH** appears.




- 2 The capsule may be blocked and under pressure.




- 3 Coffee mix is pressed out of top of capsule holder. **Do not unplug the machine.** Wait until pressing process is finished. This is the case if you hear no noise coming from the machine.



- 4 Do not drink the coffee! If capsule holder can be pulled out, throw away the capsule. If capsule holder cannot be pulled out wait for 20 minutes, try again. If capsule holder is still blocked, unplug machine. Call the NESCAFÉ® Dolce Gusto® hotline. For hotline numbers see last page.

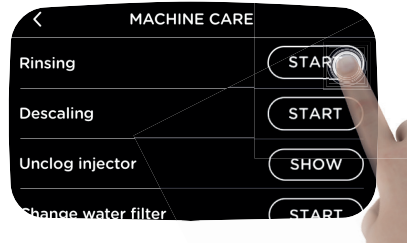


- 5 Rinse the machine – go back to main screen, call up Machine care menu, and start the Rinsing process. (see page 25). Follow instructions on screen. If fluid path is still blocked, continue with step 7.

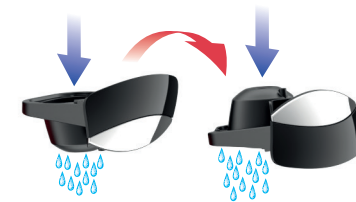

- 6 Clean both sides of capsule holder with washing-up liquid and fresh drinking water. Rinse drip tray with fresh drinking water and clean it with a clean food-safe brush.


UNCLOG INJECTOR

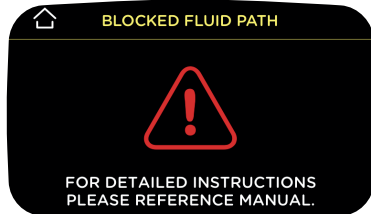

- 7** If error message **BLOCKED FLUID PATH** still appears move on to step 8.




- 10** Only remove injector when machine is cold! Push injector tool over blocked injector.

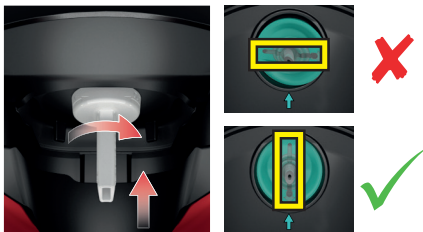


- 13** Insert injector from below into opening of machine. Support injector with hand. Rotate injector clockwise until it fits. Descal machine (▶ see page 25).



- 8** Unplug power plug! Take out the injector tool and the 2nd injector from the bottom of the capsule bin.

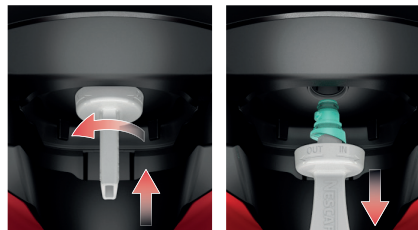


- 11** Turn injector tool anti-clockwise. Remove blocked injector. **Do not leave injector unattended! Keep injector out of reach of children!**

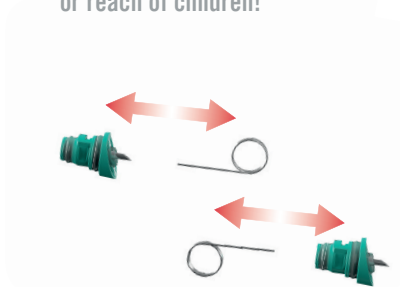

- 14** Insert cleaning needle into blocked injector to unclog it. If not possible, prepare a descaling solution with one part descaler solution to 0.5 litres of drinking water. Submerge blocked injector in the descaling solution.



- 9** Pull cleaning needle out of injector tool. **Keep needle out of reach of children!**

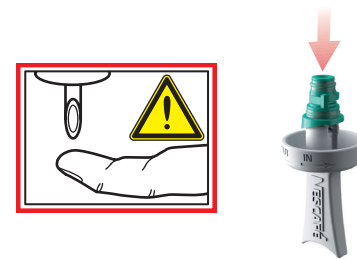

- 12** Put clean 2nd injector onto injector tool.




- 15** Re-insert cleaning needle into injector tool. After cleaning, place injector, injector tool and rinsing tool into the bottom of the capsule bin.

i Do you need an animated instruction on how to unclog injector tool? Go to machine care menu and select unclog injector video.

MACHINE CANNOT BE SWITCHED ON



1 Machine cannot be switched on.

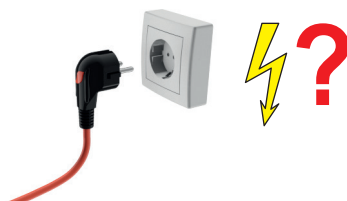

2 Check if the power plug is correctly plugged into a mains power socket. If yes, check your electricity supply.



3 If machine still cannot be switched on, call the NESCAFÉ® Dolce Gusto® hotline. For hotline numbers see last page.


BEVERAGE SPLASHING OUT



1 Beverage is splashing out of coffee outlet.




2 Stop preparation. Pull out capsule holder. Check capsule. Throw away capsule.

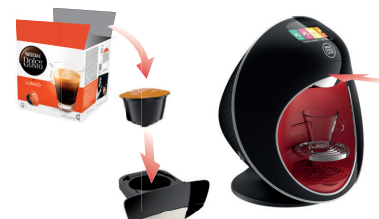

3 Place a new capsule into capsule holder and re-insert holder into machine.

WATER AROUND MACHINE

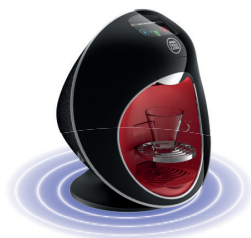

1 Water accumulates underneath or around the machine.



2 Unplug power plug!



3 Call the NESCAFÉ® Dolce Gusto® hotline. For hotline numbers see last page.